



Special note: when the inverter uses communication start and stop, it is necessary to set the communication timeout parameter of the inverter. It is recommended to set it to 20 seconds. If no data is received beyond the set time, the inverter will report the fault and stop.